

InfoDraw

Wireless Mobile Video Solutions

PMRS Vehicle Installation

Preface: This manual will explain how to install the PMRS unit in a vehicle and have its operation triggered by the activation of the vehicle.

Part 1: Configuration of the device: for 12V trigger

- a. Open the Device configurator while the device is attached with a USB cable (DIP switches elevated)
- b. Go to the GPIO tab, enable the *limit port wakeup* and enter the amount of minutes you want the PMRS to stay activated after the vehicle stops running.



Part 2: Installing the device in the vehicle:

- a. Charge the PMRS by the power supply in the car
For 12V trigger:
- b. Keep the PMRS device **off** (do not turn in on)
- c. Connect the Orange (12V) and Black (GND) wires in the PTZ/GPIO cable to a power source in the vehicle that is operational only when the vehicle is on (not directly to the car-battery).



CAUTION! Make sure to put the correct wires in place - reverse polarity may cause the device to explode.

- d. Connect the other side to the back-side of the PMRS unit

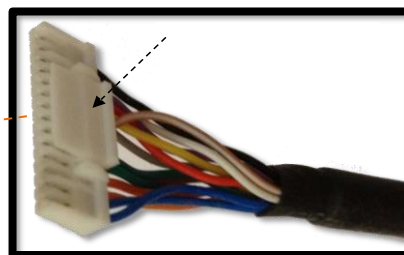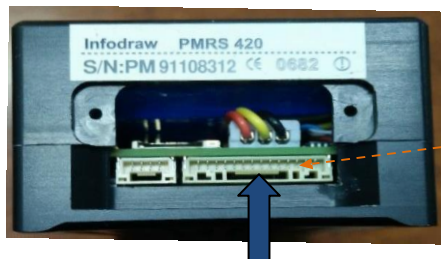

- e. Start the car and the PMRS should be activated

The GPIO/PTZ cable index:

| INDEX | COLOR | FUNCTION |
|-------|--------------|------------------|
| 1 | BLUE | GPIO IN 1 |
| 2 | BLUE-WHITE | GPIO IN 2 |
| 3 | ORANGE | 12V ON |
| 4 | RED-WHITE | EXTERNAL_TRIGGER |
| 5 | GREEN | GPIO OUT 1 |
| 6 | PURPLE | GPIO OUT 2 |
| 7 | BLUE-WHITE | RS232 TX |
| 8 | BROWN | RS232 RX |
| 9 | PURPUL-WHITE | PTZ TX+ |
| 10 | GRAY | PTZ TX- |
| 11 | YELLOW | 5V |
| 12 | RED | TTL TX |
| 13 | WHITE | TTL RX |
| 14 | BLACK | GND |