PMRS Vehicle Installation

Preface: This manual will explain how to install the PMRS unit in a vehicle and have its operation triggered by the activation of the vehicle.

Part 1: Configuration of the device: for 12V trigger

a. Open the Device configurator while the device is attached with a USB cable (DIP switches elevated)
b. Go to the GPIO tab, enable the *limit port wakeup* and enter the amount of minutes you want the PMRS to stay activated after the vehicle stops running.
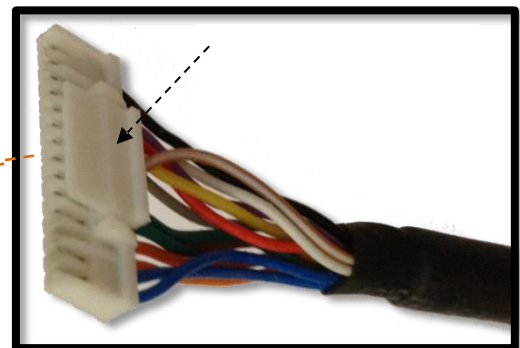

Part 2: Installing the device in the vehicle:

a. Charge the PMRS by the power supply in the car
b. **For 12V trigger:** Connect the Orange (12V) and Black (GND) wires in the PTZ/GPIO cable to a power source in the vehicle that is operational only when the vehicle is on (not directly to the car-battery).

CAUTION! Make sure to put the correct wires in place - reverse polarity may cause the device to explode.

c. Connect the other side to the back-side of the PMRS unit

d. Start the car and the PMRS should be activated